

CO2 Monitor Operating Instructions

Model: RAD-0100

Doc Rev 7/2012

Table of Contents

1. Product Overview
2. Package Contents Check & Main Unit View
3. LCD Display Symbols
4. SEU (Sensor Unit) Instructions
5. RDU (Remote Display Unit) Instructions
6. Safety Notes
7. Caring for Your Product
8. Installation Instructions
9. Customizing the Factory Default Settings
10. Specifications
11. Weight & Dimensions
12. Fault Codes & Troubleshooting Guide

1. Product Overview

Thank you for selecting the RAD-0100 CO2 Monitor. It is designed to detect the presence of carbon dioxide in ambient air to protect people in confined spaces. High concentrations of CO2 in confined spaces are dangerous, and may lead to health problems ranging from headaches and fatigue to asphyxiation and death. The RAD-0100 CO2 Monitor includes an audible alarm and visual indicator which will activate when CO2 concentration reaches a user-defined pre-set level. Detection of high levels of CO2 will also activate a relay that can be used for a fan to ventilate the confined space and reduce CO2 concentration in the area. This makes the RAD-0100 CO2 Monitor useful in CO2 storage areas, breweries, wineries, cellars, beverage dispensing areas, restaurants or fast food outlets.

Features:

1. NDIR (Non-Dispersive Infrared) technology is used to measure CO2 concentration up to 50,000 ppm (parts per million).
2. SEU (Sensor Unit) can connect with up to 3 RDU (Remote Display Units) to allow warnings at multiple locations.
3. Large digital LCD display clearly indicates the ambient CO2 concentration and temperature.
4. Relay output can automatically control a fan to ventilate confined spaces.
5. Audible and visual alarm indications.
6. IP54 Water Proof Protection of SEU (Sensor Unit) except backside when installed on the wall.

2. Package Contents Check & Main Unit View

The RAD-0100 package comprises the following parts:

Main Unit:


SEU(Sensor Unit)	RDU (Remote Display Unit)	Panel holders
Network cable connector	7 meter communication cable	User manual

Accessories:

Plug lock	1 pc	Screw	10pcs	Expansion plug	10 pcs
Nail cable clip	10 pcs	Warning paper	1 pc		


Caution: Move the rubber cap from position "M" to position "L" when RAD-0100 is first removed from the packaging so that the vent is not blocked while the RAD-0100 is working.

SEU (Sensor Unit)

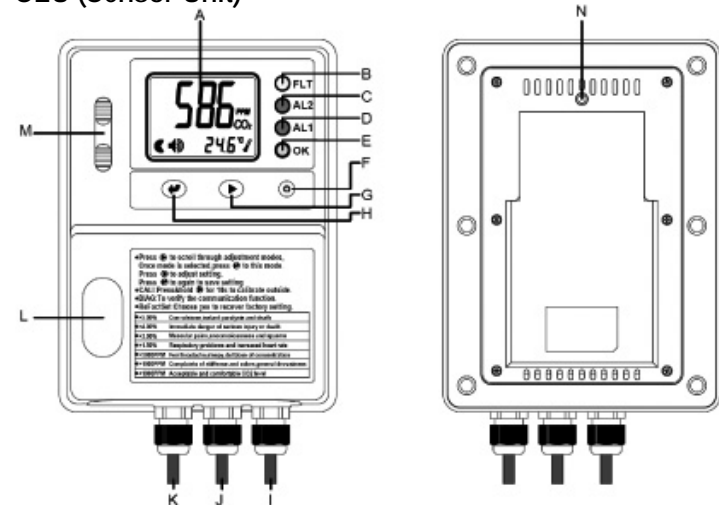

- A. LCD display
- B. Yellow LED (Fault indicator)
- C. Red LED (Alarm 2)
- D. Red LED (Alarm 1)
- E. Green LED (Power)
- F. Reset Button
- G. Mode Button
- H. Enter Button
- I. Communication Cable to RDU
- J. Relay Output
- K. Power Supply
- L. Rubber Cap
- M. Ambient Air Entry Vents
- N. Buzzer

RDU (Remote Display Unit Model RAD-0101)

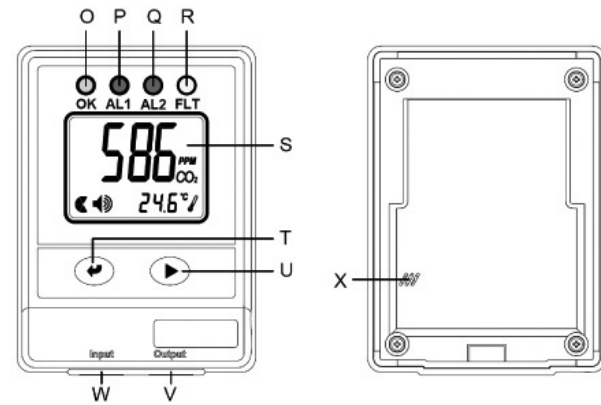

- O. Green LED (Power)
- P. Red LED (Alarm 1)
- Q. Red LED (Alarm 2)
- R. Yellow LED (Fault Indicator)
- S. LCD Display
- T. Enter Button
- U. Mode Button
- V. RJ45 Plug for additional RDUs (Output)
- W. RJ45 Plug for SEU (Input)
- X. Buzzer

3. LCD Display Symbols

Symbol	Meaning	Description
586 ppm CO2	CO2 Concentration ppm (Parts Per Million)	Ambient CO2 concentration
24.6°C	Temperature (Celsius)	Ambient temperature in Celsius
76.3°F	Temperature (Fahrenheit)	Ambient temperature in Fahrenheit
Speaker icon	Alarm	Alarm icon
DIAG	Diagnose	Test communications between the SEU and RDU
AL 1	First Alarm level	The relay will be triggered when CO2 concentration exceeds the first alarm level, the Red 1 LED will flash, and buzzer will sound
AL 2	Second Alarm level	Safety Notice "ESC" displays on LCD when CO2 concentration exceeds the second alarm level. The Red 1 and Red 2 LEDs will flash, and buzzer will sound
CALI	Calibration	Calibration mode - when the accuracy deviates from the actual CO2 concentration.
ReFactSet	Recover Factory Setting	Recover factory default settings. This cancels all customized settings.
ESC	ESC	Indicates the CO2 leakage once the CO2 level is above the second alarm level
Hi	Hi	The CO2 concentration is above 5% (50,000ppm).

4. SEU (Sensor Unit) Instructions

The SEU should be placed in a room where CO2 is likely to accumulate, or is stored, such as a closet with CO2 canisters. With power, the green OK LED will turn on and the LCD will immediately display the ambient CO2 concentration and temperature.

The SEU has DIAG, FLT AL1, AL2, CALI and ReFactSet functions. The **DIAG** function executes communication tests between the SEU and RDU. Calibrate the SEU under **CALI** mode when necessary. If data-setting is done incorrectly, use the **ReFactSet** to return to the original factory setting.

There are two alarm levels. Each level is adjustable. **AL1** can be set to 0.5%, 1%, 1.5% or 2% CO2. By default, **AL1** is set to 1.5% (15,000ppm). **AL2** can be set to 1.5%, 2%, 2.5%, 3%, 3.5%, or 4% CO2. By default, **AL2** is set to 3% (30,000ppm).

When the SEU detects CO2 levels that exceed the first alarm level, the red **AL1** LED will blink, the buzzer will sound intermittently, and the relay will be triggered. When CO2 levels drop below the first alarm level, the LED and buzzer will stop, and the relay will return to the normal open state.


If the concentration of CO2 continues to rise above the second alarm level, the **AL1** and **AL2** red LED's will flash together, and the tempo of the buzzer will increase. Once triggered, the **AL2** alarm will remain until the Reset Button on the SEU is pressed or AC power is removed.

Warning: Once the ambient CO2 concentration rises above the second alarm level, a safety notice "ESC" will be continuously displayed on both the SEU and RDU LCDs. **YOU MUST ventilate the space and/or wear an oxygen mask before entering the room where the SEU is placed.**

To clear the flashing **ESC** from the LCD, press the **Reset** button or unplug the AC adapter.

If the communication cable between the SEU & RDU are not properly connected or are loose, the fault **FLT** LED will blink. To fix this, re-insert the cable on both ends. If the cable is accidentally inserted into the output port on the RDU, after °C/°F flashes for one minute, the "Er7" message will flash on LCD. Unplug the cable from the output port and plug it into the Input port. The unit will work normally after corrective action.

If cleaning places where the SEU is installed, remove the rubber cap from the storage position and place it over the ambient air vents as shown below. Water will not enter into the SEU during cleaning. **Failure to seal the ambient air vents from water may render the SEU CO2 sensor inoperable.** After cleaning, be sure to return the rubber cap to the storage position.

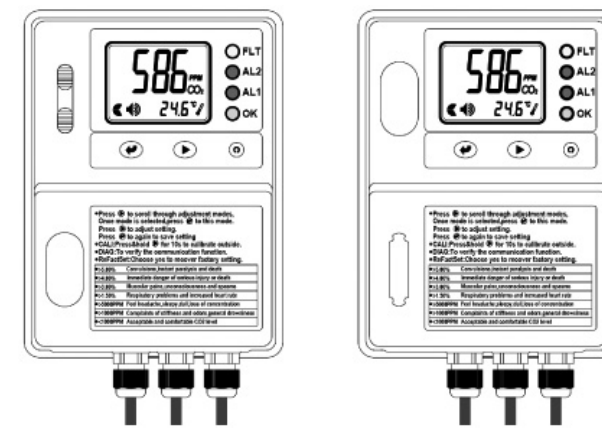

5. RDU (Remote Display Unit) Instructions

The RDU (Remote Display Unit) should be placed outside the room where CO2 is stored or used. The RDU is connected to the SEU with a wire that has a maximum length of 25 feet. The RDU should be placed where it can be conveniently observed before entering the room where the SEU is located. The RDU is a repeater, and displays the measurements made by the SEU on an easy-to-read digital LCD along with important safety information.

The AL1, AL2, OK and FLT LEDs function the same on both the SEU and RDU.

Make sure the cable from SEU is connected into the **INPUT** port of the RDU.

The RDU has a **DIAG** function to test the communication between the SEU and RDU. However, you can only reset the RAD-0100 CO2 Monitor from the SEU.

6. Safety Notes

Your safety is very important. To ensure you use the product correctly and safely, please read these warnings and this User Manual before using the RAD-0100. Otherwise, the protection provided by the equipment may be impaired. These warnings provide important safety information and should be observed at all times.

1. Handle the device carefully; do not subject the product to impact or shock.
2. Do not place the unit or the adaptor near a heat source. Heat can cause distortion of the unit, which may result in an explosion or fire.
3. Do not touch the exposed electronic circuitry of any device under any circumstances, as there is the danger of electric shocks.
4. Only use the included power adaptor. Improper power adaptor or power sources can cause serious damage to the product, resulting in injury or death to the user.
5. When first installing the unit, use the "DIAG" function to verify the communication between SEU and RDU.
6. Make sure that the power adaptor is tightly mounted using the plug lock so that the power adapter cannot be easily or accidentally disconnected.
7. NEVER enter a room if the safety notice **ESC** is displayed on the LCD of either the SEU & RDU. Careful and protective action must be taken before entering the room where the SEU is installed.
8. Ensure that external power is supplied to the ventilation fan while the relay is closed. If there is no power to the fan, the relay will not work.

7. Caring For Your Product


1. **Repair** - Do not attempt to repair the product or modify the circuitry by yourself. Please contact your local dealer or a qualified repairman if the product needs servicing.
2. **Cleaning** - Disconnect the power before cleaning. Use a damp cloth. Do not use liquid cleaning agents such as benzene, thinner or aerosols, as these will damage the device.
3. **Maintenance** - We recommend users to test the communication between the SEU and RDU under "DIAG" function to verify the working conditions for the SEU and RDU. If the four LED's blink and the buzzer of SEU and RDU sound simultaneously, it indicates that SEU and RDU work normally. When the LCD displays a safety icon "ESC", please take immediate protective action to check if CO2 leakage has occurred. We suggest users to do the calibration and thorough function check once within two year to make sure that the RAD-0100 CO2 Monitor is working properly.

8. Installation Instructions


Please carefully take out the SEU (Sensor Unit), RDU (Remote Display Unit), panel holders, network cable connector, 7 meter communication cable, plug lock, screws, expansion plugs, nail cable clips, and warning paper from the package.

Step-by-Step Installation:

1. Choose a suitable location to install the SEU. Fix the panel holder on the wall with the four screws (included); the recommend installation height is about 0.45 meters (1.5 feet) from floor and close to the manifolds and valves as possible.
2. Put the SEU on the panel holder, making sure that they are connected tightly.
3. Fix a second panel holder in a suitable location outside the monitored space with screws (included). Push the RDU onto the panel holder, and stick the warning paper next to the RDU. Repeat this step for up to 3 total RDU units.
4. The communication cable is pre-wired to the SEU. Route the cable to the first RDU and fixed the communication cable to the wall by nail cable clips. Then plug the cable into the **INPUT** port on the RDU. Daisy chain cables from the RDU to any additional RDUs.
5. The RAD-0100 CO2 Monitor has one relay output. The relay cable is pre-wired to the SEU. The relay can control a fan or blower to ventilate the monitored space when necessary. The relay will be triggered when the CO2 concentration exceeds the first alarm level.
6. After finishing the installation, plug the AC power adapter into a standard 120VAC electrical supply outlet.
7. Mount the Plug lock by expansion plugs so that the power adapter cannot be disconnected without use of mechanical tools.
8. When the power is connected, The SEU and the RDU will immediately begin to work. Use the "DIAG" function to verify communication between SEU and RDU. The four LED's will blink and the buzzer will sound on both the SEU & RDU. After that the communication is verified. Test this by verifying that the display is the same on both the SEU & RDU.

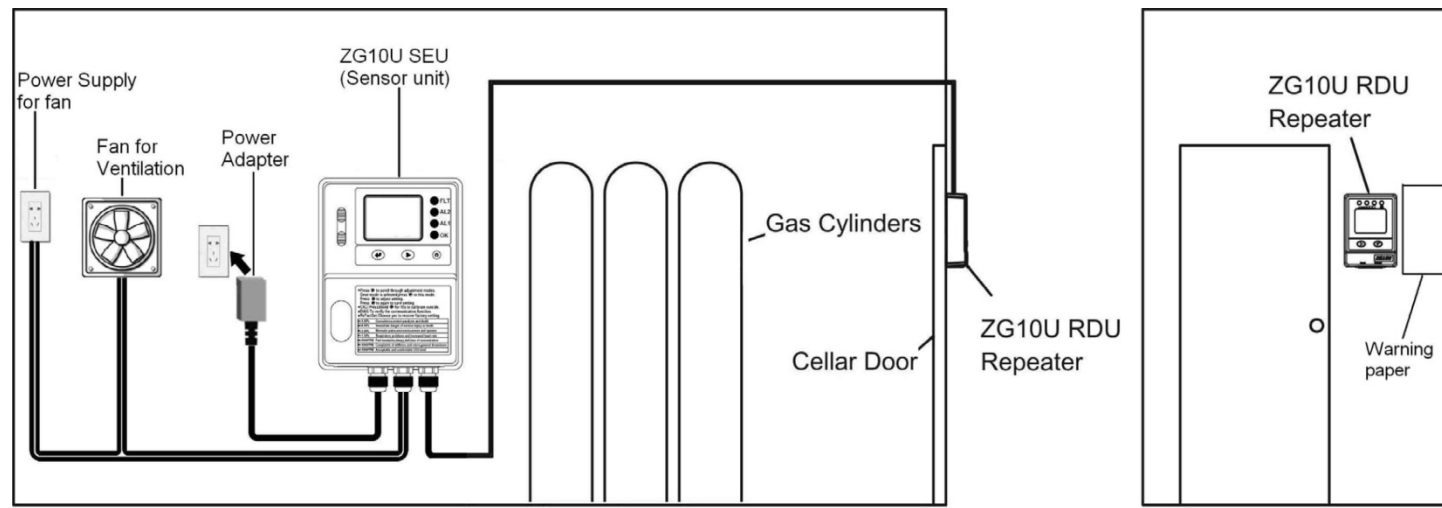

Mounting the plug lock:

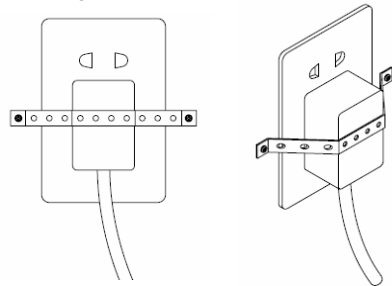

9. Customizing the Factory Default Settings

When power is connected, the SEU and RDU will immediately begin to monitor the CO2 concentration and the temperature. While the factory default settings will work for most users, you can also customize several parameters as necessary.

Temperature °C/°F:

1. Press Enter to switch between °C and °F temperature

Using the Diagnostic Function:

1. Press Mode until the DIAG icon flashes
2. Press Enter. The four LED's will blink on the SEU and the buzzer will sound
3. The four LED's will blink and buzzer will sound simultaneously on the RDU

Customizing the First Alarm:

1. Press Mode until the AL1 icon flashes
2. Press Enter. The AL1 icon shows on the LCD
3. Press Mode to step through the 0.5%, 1%, 1.5% and 2% alarm levels
4. Press Enter again to store the new AL1 alarm level.

Customizing the Second Alarm:

1. Press Mode until the AL2 icon flashes
2. Press Enter. The AL2 icon will show on the LCD
3. Press Mode to step through 1.5%, 2%, 2.5%, 3%, 3.5%, 4% alarm levels
4. Press Enter again to store the new AL2 alarm level.

Note: The second alarm level should be higher than the first alarm level when setting with the alarm level parameter.

Using the Calibration Function:

1. Press Mode until the CALI icon flashes
2. Press Enter. The CALI icon will show on the LCD
3. Press and hold Mode for at least 10 seconds. The CALIBRATING icon will flash. Calibration is done automatically. After 10 minutes the LCD will display "Pass" or "Fail".
4. If the LCD displays "Pass" press ENTER. Calibration is complete. If it displays "FAIL" repeat the process.

How to Calibrate - The SEU should be calibrated at least once a year, or after an alarm, using normal, outdoor air (approximately 400ppm). If you KNOW the room is filled with fresh air, you can calibrate the SEU in-place. Otherwise you should move the SEU and power supply outdoors and calibrate. Do not breathe toward to SEU during the calibration process, as your breath's CO2 will affect the calibration settings.

Restore Factory Settings:

1. Press Mode until the ReFactSet icon flashes
2. Press Enter, then press Mode to choose either "Yes" or "No"
3. Press Enter again to save the settings

Note: If you set the alarms or calibrate the sensor incorrectly, use the ReFactSet to return the SEU to the default factory settings.

10. Specifications

CO2 & Temperature specification:

CO2 Specification	
Measurement Range	0 - 50,000 ppm (5%) display
Display Resolution	10 ppm
Accuracy	±100 ppm or ±5% of reading, whichever is greater
Repeatability	±20 ppm @400 ppm
Annual Drift	<20 ppm/Year@400ppm
Temperature Dependence	±0.2% of reading per °C or ±2 ppm per °C, whichever is greater, referenced to 25°C
Pressure Dependence	0.13% of reading per mm Hg
Response Time	<60 seconds for 90% response to step change
AL1 (First Alarm Level)	0.5 / 1 / 1.5 / 2 % , Default AL1= 1.5%
AL2 (Second Alarm Level)	1.5 / 2 / 2.5/ 3 / 3.5 / 4 % , Default AL2= 3%
Sound Alarm	80db@10cm
Warm-Up Time	<60 seconds at 22°C

Temperature Specification:

Temperature Range	0°C to 50°C (32°F to 122°F)
Display Resolution	0.1°C (0.1°F)
Display Options	°C/°F
Accuracy	±1°C(±2°F) when CO2 concentration is below first alarm level
Response Time	20-30 minutes (case must equalize with environment)
Operating Conditions:	
Operating Temperature	0°C to 40°C (32°F to 104°F)
Humidity Range	0 ~ 95% RH non-condensing
Storage Conditions:	
Storage Temperature	-20°C to 60 °C (-4°F to 140°F)


Power Supply & Relay Output:

Power Supply	AC adapter 110/220 VAC	
AC Input	Voltage	100 ~ 240 VAC
	Frequency	50 / 60 Hz
	Power Requirement	1 W maximum @ 115 VAC 60 Hz 2 W maximum @ 230 VAC 50 Hz
AC/DC Output	Voltage	6VDC
	Power	1.8 W
Peak Input Current	0.3 A from 6 VDC	
Relay Output	30 VDC or 250 VAC, max 2A, SPST, Normally Open	


11. Weight & Dimensions

Weight: SEU (Sensor Unit): 459 g
RDU (Remote Display Unit): 130 g

Dimensions:

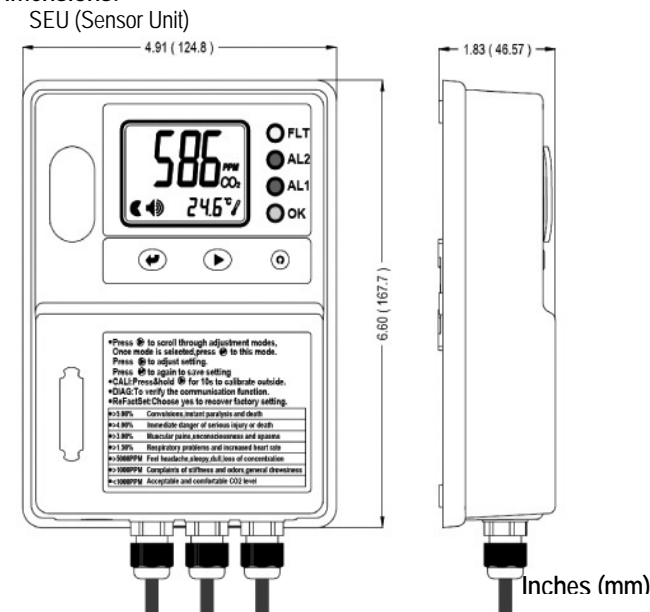

RDU (Remote Display Unit)

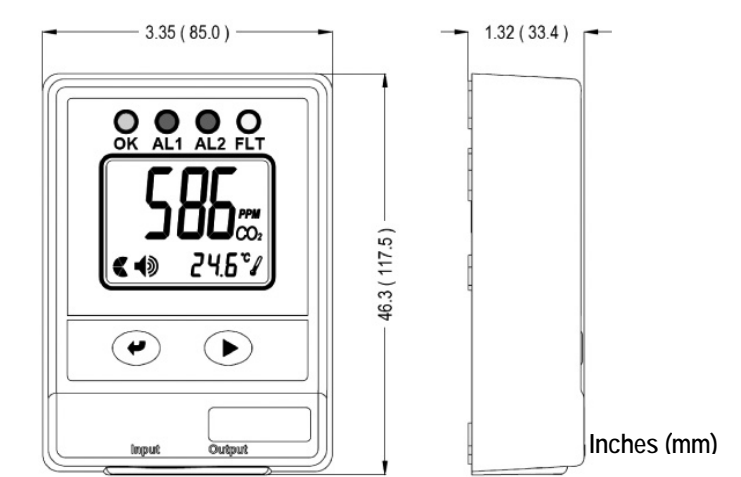

12. Fault Codes & Troubleshooting Guide

This section includes a list of Frequently Asked Questions for problems you may encounter with the RAD-0100 CO2 Monitor.

No	LCD Fault Icon	Description (of the fault)	SEU Indication	RDU Indication	Suggested Actions
1	Er3	The ambient temperature has exceeded the temperature range 0°C to 50°C (32°F to 122°F)	"Er3" flash Fault LED blink, Buzzer beep	"Er3" flash Fault LED blink, Buzzer beep	This error will disappear when the temperature returns to the range between 0°C and 50°C (32°F to 122°F)
2	Er4	Something wrong with sensor or sensor has exceeded its expected life	"Er4" flash Fault LED blink, Buzzer beep	"Er7" flash Fault LED blink, Buzzer beep	Unplug the AC adapter and reconnect it. If the Er4 reappears, contact the dealer.
3	Er5 Er6	EEPROM System Problem	"Er5" & "Er6" flash, Fault LED blink, Buzzer beep	"Er7" flash Fault LED blink, Buzzer beep	Unplug the AC adapter and reconnect it. If the Er5 or Er6 reappears, contact the dealer.
4	Er7	Internal Data Transmission Error	"Er7" flash, Fault LED blink, Buzzer beep	"Er7" flash, Fault LED Blink, Buzzer beep	①Unplug the AC adapter and reconnected it. ②Check the RJ45 plug is connected into the INPUT port of RDU,if the "Er7" displays on the RDU only.
5	Er8	The accuracy of CO2 sensor may deviate from the actual CO2 concentration.	"Er8" flash Fault LED blink, Buzzer beep	"Er8" flash Fault LED blink, Buzzer beep	①Unplug the AC adapter and reconnect it. If the "Er8" still appears, contact the dealer. ② Calibrate the unit. If the "Er8" still appears, contact the dealer.



CO2Meter, Inc.
131 Business Center Drive, A-3, Ormond Beach, FL 32174
Phone: 877-678-4259 | Fax: 866-422-2356
Email: Sales@co2meter.com
www.co2meter.com

