

SV-1026 24/DC Solenoid Shut Off Valve for Remote Storage Safety Alarms

RAD-0102-6 can be wired to SV-1026-24/DC Safety Shut-off Valve

POWER:

The Stock RAD-0102-6 is equipped with a 12VDC Power Adapter.

The +12VDC Power Adapter will be replaced with a 24VDC (Direct Current) Power Source.




The +24VDC Power Adapter will power the RAD-0102-6 and the Safety Shut-Off Valve.



Solenoid Safety Shut Off Valve for Remote CO2 Storage Safety 3 Alarm

When 24VDC is applied to the system, the RAD-0102-6 and Solenoid Valve are powered ON.
 When RAD-0102-6 Alarm2 triggers, Relay2 deactivates the Safety Shut-Off Valve.

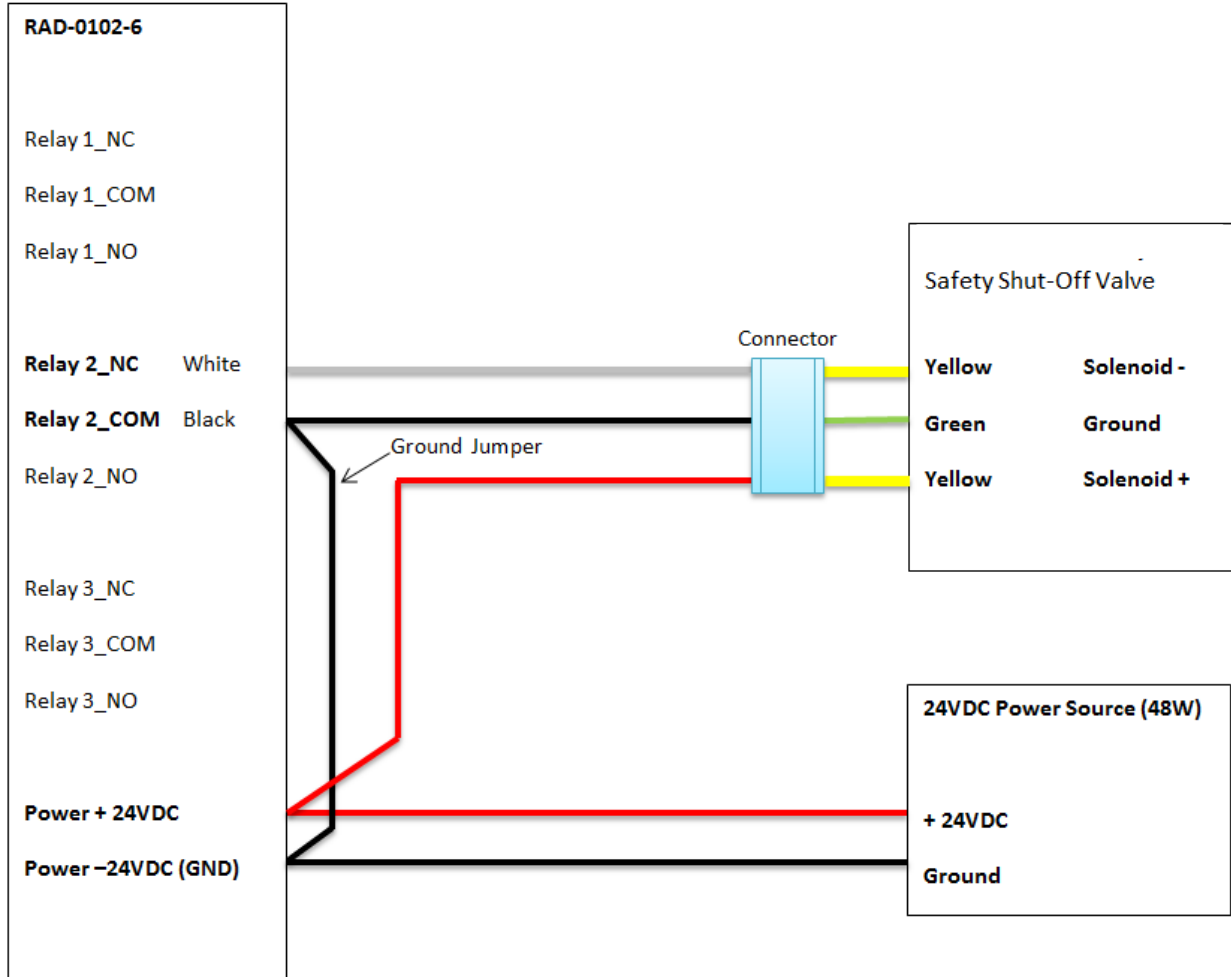



131 BUSINESS CENTER DRIVE
ORMOND BEACH, FL 32174
SUPPORT (386) 256-4910
SALES (877) 678-4259
WWW.CO2METER.COM | SALES@CO2METER.COM